

Contents

Installation

- Your remote control **2**
- Preparation **3**
- To use the menus **4**
- Store TV channels **4**
 - Select the menu language **4**
 - Automatic installation **5**
 - Manual installation **6**
 - Reshuffle the programme list **7**
 - Displaying the programme list **7**

Operation

- Use of the remote control **8-9**
- Keys in front of the TV **10**
- Picture menu **11**
- Sound menu **11**
- Special menu **12**
- Teletext **13-14**

Connect peripheral equipment

- Connecting and selecting equipment **15-17**
- Video recorder keys **18**

- Tips 19**
- Index 20**

Help?

 
If this instruction manual does not give an answer or if 'Tips' do not solve your TV problem, you can call your Local Philips Customer or Service Centre. See the supplied World-wide guarantee booklet. Please, have the Model and Product number which you can find at the back of your television set or on the packaging, ready, before calling the Philips helpline.

Model:

Product No:


Installation

Your remote control

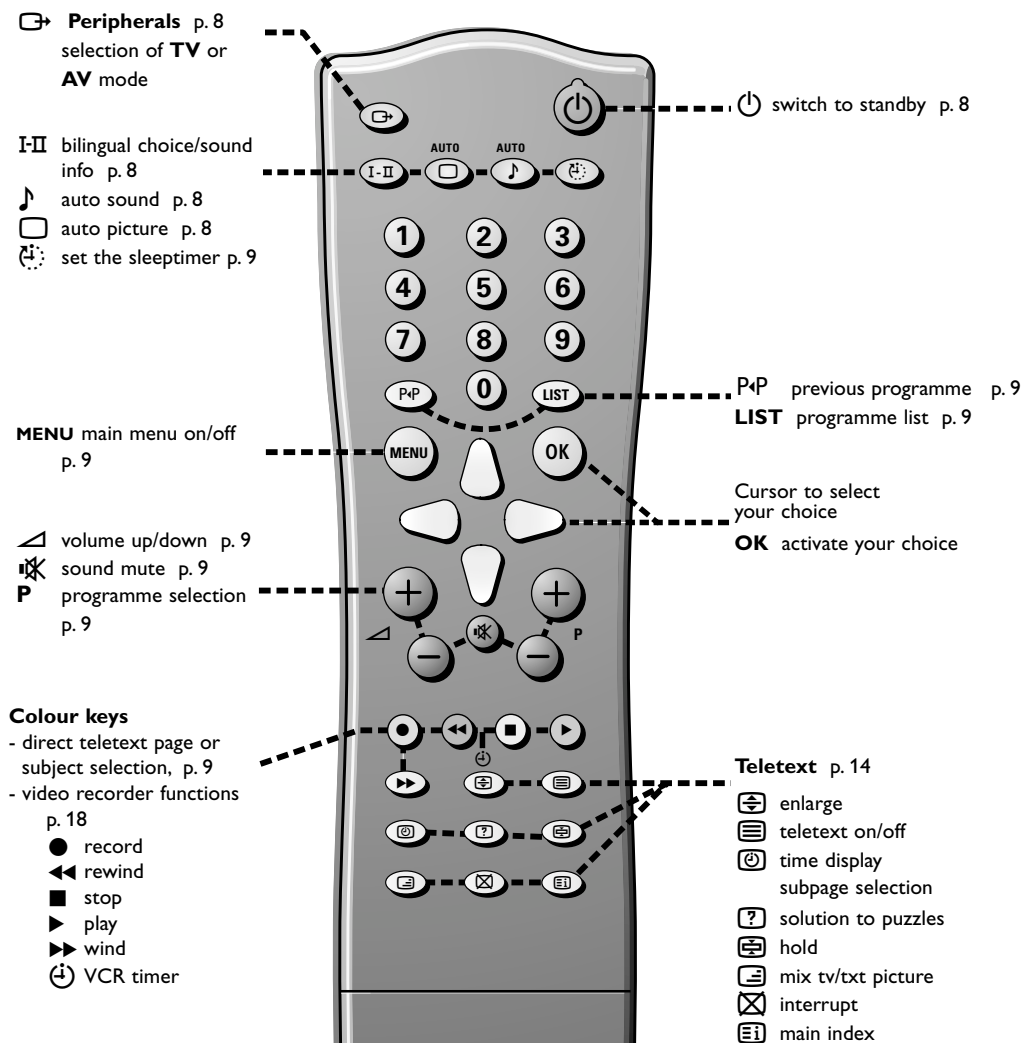


Preparation

 1 Place the TV on a solid surface.

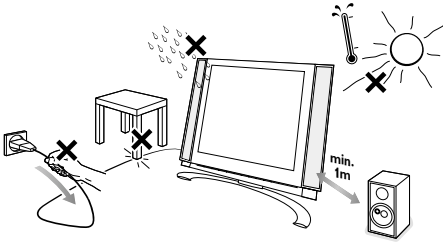


Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover. To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed on or in the vicinity. Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing.

 
2 Insert the aerial plug firmly into the aerial socket **ANT IN** 75 Ω at the back of the TV.

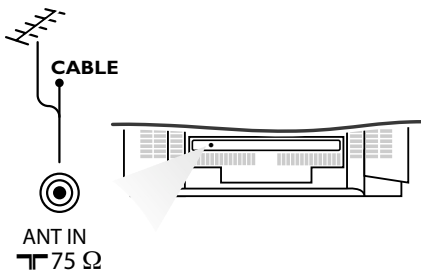

 3 Remote control: Remove the cover of the battery compartment. Insert the 2 batteries supplied (Type R6-1.5V).

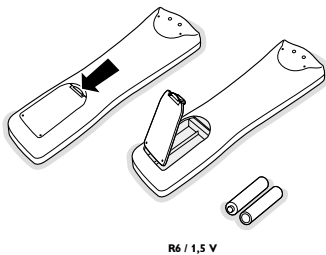

 
4 **Power:** This TV operates on a DC supply provided by the AC-DC adaptor. The voltage is as indicated on the label on the back cover.

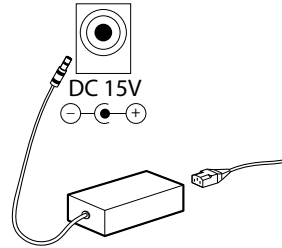



Only use the AC-DC adaptor supplied with the TV and never apply an AC mains to the TV directly. The AC-DC adaptor operates on an AC mains supply, the voltage is as indicated on the label of the AC-DC adaptor. Connect the DC plug of the AC-DC adaptor to the DC 15V socket at the back of the TV. Connect the AC-DC adaptor and its mains cord. Insert the mains plug in the wall socket having a mains voltage of 110V-240V.

5 **Switch the TV on:** Press the power key at the front side of the TV to switch it on or off.

If the TV is in standby mode, the standby indicator in front of the TV illuminates brightly. Press the standby key  again or the - P + key or one of the digit keys on the remote control to switch the TV on.


To use the menus

  - 1 Press the **MENU** key repeatedly to display each menu.
- 2 Use the cursor up/down to select a menu item.
- 3 Use the cursor left/right to adjust the setting of a menu item or press the **OK** key to enter a submenu.

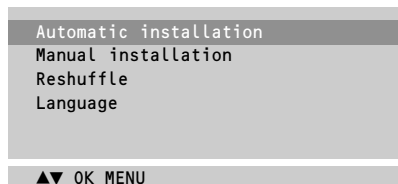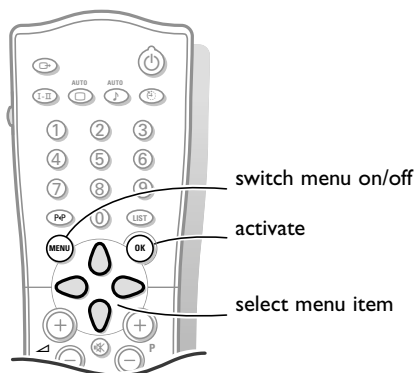

Store TV channels

 Select the menu language

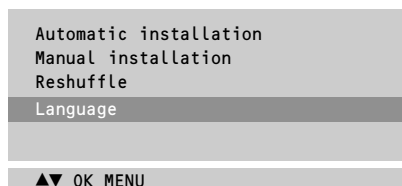


- 1 Press the **MENU** key on the remote control once to select the installation menu.
- 2 Use the cursor down to select **Language**.
- 3 Press the **OK** key.
- 4 Press the cursor up/down to select your language.
- 5 Press the **OK** key.

You can search for and store the TV channels in two different ways: using Automatic installation, see p. 5 or Manual installation (tuning-in channel by channel), see p. 6.

Select your choice and press the **OK** key.

 Automatic installation

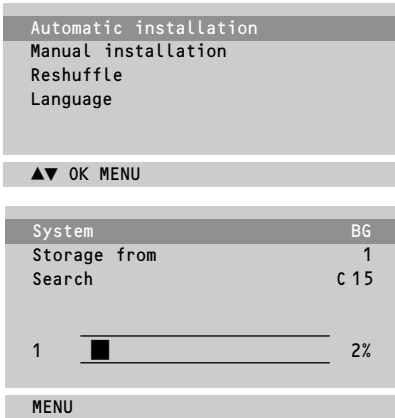

- 1 Select the TV system.
- 2 Press the cursor left/right to select the TV system of the country or part of the world from where you want to receive the TV channels.
If you are connected to a cable system, select the TV system of your country or part of the world you are now located.
DK: PAL D/K, SECAM D/K (East Europe)
BG: PAL B/G, SECAM B/G (Europe/East Europe/France)
I: PAL I/II (U.K./Ireland)
L (if provided) (France)
- 3 Press the cursor up/down to select **Storage from**.
- 4 Press the cursor left/right to select a

 
 
channel number or enter the channel number with the digit keys from where you want to start searching for new channels. If e.g. you want to keep the channels 1 to 11 stored earlier, enter channel number 12.

Your TV will search for new channels from number 12 onwards.

- 5 Press the cursor up/down to select **Search**.
- 6 Press the **OK** key to start Automatic programming.
All available TV channels are searched for and stored automatically.
The names of the TV channels are stored as well if the TV channels broadcast VPS (Video Programme Service), PDC (Programme Delivery Control) or Teletext.
If no name can be assigned to the TV channel, the channel number only is assigned and stored as C-channel (V/UHF 01-69) or S-channel (Cable 01-47), followed by a number.

To stop auto programming, press the **MENU** key.
When auto programming is completed, the **Programme reshuffle** menu appears. See further on.
- 7 Press the **MENU** key repeatedly if you want to exit the menu.

Manual installation

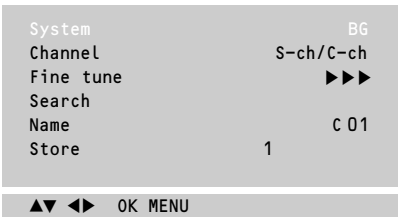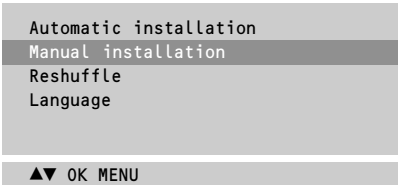

Searching for and storing TV channels is done channel by channel. Also you can assign a name to a TV channel with up to 5 letters or numbers.

You must go through every step of the manual programme menu.

- 1 Select **Manual installation** in the installation menu.
- 2 Press the **OK** key to enter the Manual installation menu.
- 3 Press the cursor left/right to select the TV system of the country or part of the world from where you want to receive the TV channel.
If you are connected to a cable system, select the TV system of your country or part of the world you are now located.
DK: PAL D/K, SECAM D/K (East Europe)
BG: PAL B/G, SECAM B/G (Europe/East Europe/France)
I: PAL I/II (U.K./Ireland)
L (if provided) (France)
- 4 Press the cursor up/down to select **Channel**.
- 5 Press the cursor left/right to select **C-ch** for aerial channels or **S-ch** for cable channels.
If you know the C- (01-69) or S-channel number (01-47), enter it directly with the digit keys 0 to 9.

Ask for a list from your cable company or dealer.

- 6 Press the cursor up/down to select **Search**.
- 7 Press the cursor left/right to start searching. If a channel is found the search will stop.

Fine tune

In case of poor reception, you can improve the reception by fine tuning. Press the cursor up/down to select **Fine tune**. Press the cursor left/right to fine tune for the best picture and sound.

Assigning a channel name

It is possible to change the name stored in the memory or to assign a name to a TV channel which has not yet been entered. A name with up to five letters or numbers can be given to the programme numbers 0 to 99.

Press the cursor up/down to select **Name**. Select the character with the cursor left/right. Space, numbers and other special characters are located between Z and A. Press the **OK** key. Select a following character. Proceed with the following steps.

- 8 If the channel is the one required, press the cursor up/down to select **Store**.
- 9 Press the cursor left/right to select a channel number or enter the channel number with the digit keys.
- 10 Press the **OK** key to store the TV channel. Repeat steps 4 to 10 to store another TV channel.

Press the **MENU** key repeatedly if you want to exit the menu.

Reshuffle the programme list

Automatic installation			
Manual installation			
Reshuffle			
Language			
▲▼ OK MENU			
0	ARD	5	ARD1
1	ZDF	6	ZDF1
2	C12	7	C12
3	S 4	8	S 44
4	CH-5	9	CH-5
•	Delete	•	Copy
•	Move	•	Skip
▲▼ ◀▶ OK MENU			

According to your preference you can delete or skip the stored TV channels. You can also change the order of the stored TV channels or insert a blank data into the selected channel number.

- 1 Press the cursor up/down to select **Reshuffle** in the Installation menu.
- 2 Press the **OK** key to enter the Reshuffle menu.

Deleting a TV channel

- 1 Press the cursor up/down, left/right to select a TV channel to be deleted.
- 2 Press the red key on the remote control **twice**.
The selected TV channel number is deleted, all the following channels are shifted up one position.

Copying a TV channel

- 1 Press the cursor up/down, left/right to select a TV channel to be copied.
- 2 Press the green key on the remote control.
All the following channel numbers are shifted down one position.

Moving a TV channel

- 1 Press the cursor up/down, left/right to select a channel number to be moved.
- 2 Press the yellow key on the remote control.
- 3 Press the cursor up/down, left/right to move the TV channel to the desired channel number.
- 4 Press the yellow key again to release this function.

Skipping a channel number

- 1 Press the cursor up/down, left/right to select a channel number to be skipped.
- 2 Press the blue key on the remote control. The skipped TV channel is displayed in blue.
- 3 Press the blue key again.

After leaving the installation you can browse through the TV channels by pressing the cursor keys up/down. Only those TV channels which are not skipped can be selected. Skipped TV channels can still be selected with the digit keys or in the programme list in which they will be displayed in blue.

Press the **MENU** key repeatedly to exit the menu.

Displaying the programme list

0	ARD	5	ARD1
1	ZDF	6	ZDF1
2	C12	7	C12
3	S 4	8	S 44
4	CH-5	9	CH-5
▲▼ ◀▶ OK MENU			

- 1 Press the **LIST** key on the remote control to display the programme list.
- 2 Press the cursor up/down, left/right to run through the list of 100 channel numbers.
- 3 Press the **OK** key to select the desired TV channel.

Note: TV channels displayed in blue have been set up to be skipped in the Reshuffle menu.

Operation

Use of the remote control

Source

 
Select other peripherals: press repeatedly to select **TV**, **AV1**, **AV2** or **S-VIDEO** mode.

I-II Bilingual choice and sound mode selection

Press this key

- to switch from **Stereo** to **Mono** sound in case of stereo transmission, or from **Nicam Stereo** to **Nicam Mono**, in case of digital transmission
- to switch from **Nicam Dual I** to **Nicam Dual II** or **Nicam Dual I-II** in case of Nicam Dual transmission
- to choose between **Dual I**, **Dual II** or **Dual I-II** in case of bilingual transmission:
Dual I sends the primary broadcast language to the loudspeakers;
Dual II sends the secondary broadcast language to the loudspeakers;
Dual I-II sends a separate language to each loudspeaker.

Note: in case of weak stereo sound signals, with stereo or Nicam stereo transmission, select mono reception.

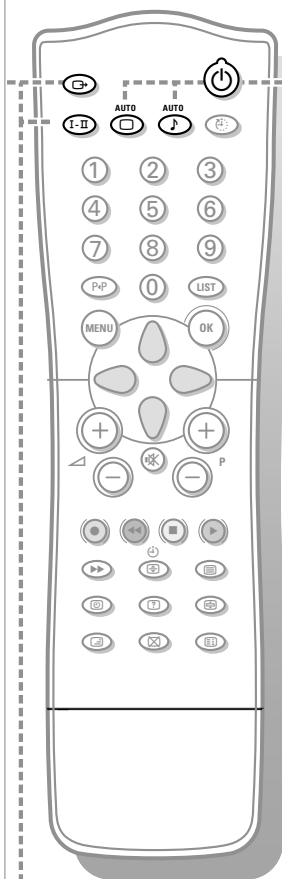

Standby

Switches the TV on from standby or off to standby.

AUTO keys

To select predefined picture and sound settings.

AUTO picture

Each time it is pressed, a different picture setting is selected, corresponding with specific factory settings of Contrast, Brightness, Colour and Sharpness.

AUTO sound

Each time it is pressed, a different sound setting is selected, corresponding with specific factory settings of treble and bass.

Personal refers to the personal preference settings of picture and sound selected and stored in the picture and sound menu.

Sound output selection in AV mode

In AV mode, you can select the output sound for the left and right loudspeakers.

Press the **I-II** key repeatedly to select:

- **L+R**: the audio signal from the audio L input is sent to the left loudspeaker, the audio signal from the audio R input to the right loudspeaker
- **L+L**: the audio signal from the audio L input is sent to the left and right loudspeakers
- **R+R**: the audio signal from the audio R input is sent to the left and right loudspeakers.

MENU Press repeatedly to display each menu.

OK Press this key to activate your choice, when in the menus.

Volume

Press + or - to adjust the volume.

Mute

Temporarily interrupt the sound or restore it.

P Programme selection

- to browse through the TV channels which are not skipped
- to switch the TV on from standby.

Video recorder keys see p. 18.

Time display

 

The time, downloaded from the TV channel (with teletext broadcast) stored on programme number 1 or the lowest not skipped programme number, is displayed on the screen.

Sleeptimer

With this key you can set a time period after which the TV should switch itself to standby.

Press the key repeatedly to select the number of minutes. The counter runs from 0, 10, 20, 30.... to 240 minutes.

The timer begins to count down from the number of minutes selected.

Note: To view the remaining time, press the  key once. To cancel the sleep time, repeatedly press the  key until 0 appears.

0/9 Digit keys

To select a TV channel.

For a channel number under 10, first enter a 0, e.g. 05 for 5.

P/P Previous programme

To display the previously selected TV channel.

 
LIST Programme list

To display the programme list.


Teletext on/off see p. 13.

Teletext functions see p. 14.

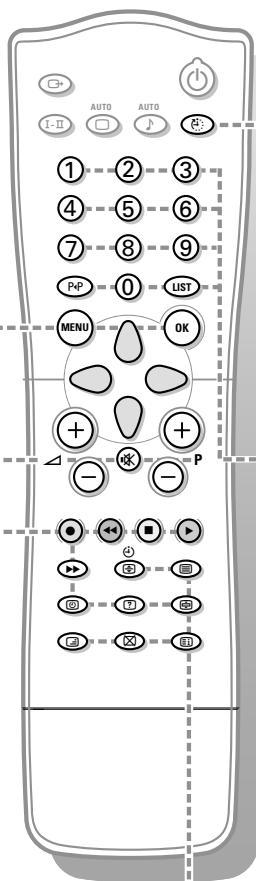

Keys in front of the TV

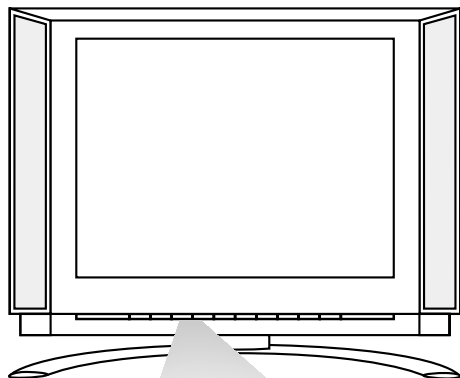 

Should your remote control be lost or broken you can still operate your TV with the keys in front of the TV.

ON/OFF: Press the power **ON/OFF** key to switch the TV on or off

TV/VIDEO: Press repeatedly to select **TV** or **AV** mode

MENU: Press repeatedly to display each menu

OK:

- Press this key to activate your choice when in the menu
- **Auto demonstration:** Keep the **OK** key pressed for about 10 seconds. All the menus are being displayed automatically one after the other. To stop Auto demonstration, press any key on the front panel.

-VOL + :

 
- Press - or + to select a menu item;
- Press - or + to adjust the volume;
- Press - or + to adjust the menu settings.

- CH/PR +:-

- Press - or + to browse through the TV channels which are not skipped;
- Press - or + to select a menu item;
- To switch the TV on from standby.

⏻: Switches the TV on from standby or off to standby. The ⏻ indicator lights up brightly when the TV is in standby, dims when the TV is switched on.

Use of the menus

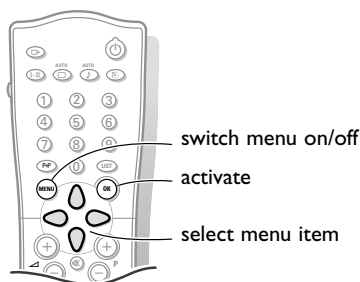

- 1 Press the **MENU** key repeatedly to display the picture, sound or special menu.
- 2 Use the cursor up/down to select a menu item.
- 3 Use the cursor left/right to adjust the setting of a menu item or press the **OK** key to enter a submenu.
- 4 Press the **MENU** key repeatedly if you want to exit the menu.

Picture menu

Contrast	100
Brightness	95
Colour	85
Sharpness	80
Tint	
▲▼ ◀▶ OK MENU	

You can adjust picture contrast, brightness, colour, sharpness and tint (NTSC AV only) to the levels you prefer.

Press the **OK** key to store the adjustments. The message **Stored** appears.

Now your picture settings are stored and can be recalled with the **AUTO** ☐ key on the remote control, selecting **Personal**.

To select one of the predefined factory picture settings, press the **AUTO** ☐ key on the remote control.

Press the **MENU** key repeatedly to exit the menu

Sound menu

Equalizer	
Balance	0
AVL	On/Off
▲▼ OK MENU	

Natural	
Music	
Movie	
Speech	
Personal	
	0.1 0.5 1.5 5.0 10 kHz
▲▼ ◀▶ MENU	

You can select your preferred sound setting or you can also adjust the sound frequency of equalizer and the balance of the right and left speaker's sound output.

Switch **AVL On** to maintain constant volume levels when switching TV channels.

Equalizer

- 1 Select **Equalizer** and press the **OK** key to enter the Equalizer menu.
- 2 Select one of the predefined factory sound settings or select **Personal** to adjust your personal sound settings of treble and bass.

Setting the equalizer Personal

- 1 Select **Personal** with the cursor up/down.
- 2 Press the cursor left/right to select a sound band.
- 3 Press the cursor up/down to adjust the appropriate sound level.
- 4 Press the **OK** key to store the Personal adjustments. The message **Stored** appears.


Press the **MENU** key repeatedly to exit the menu.

Special menu

Source	TV
Child lock	Off
Auto off	Off

▲▼ ◀▶ MENU

Select TV or AV mode

- 1 Select **Source** in the Special menu.
- 2 Press the cursor left/right to select **TV**, **AV1**, **AV2** or **S-VIDEO**.
 - **AV1** for a VCR connected to the  1 euroconnector. (See Connect Peripheral equipment, p. 15)
 - **AV2** for a VCR connected to the **AV2** connector of the TV.
 - **S-VIDEO** for a S-Video VCR connected to the S-Video connector of the TV.

Note: When a VCR is connected via the aerial socket, the TV is used in TV mode.

Alternatively you can select the TV or AV mode with the source key on the remote control.

To return to TV mode, press the cursor up/down or the digit keys.

Auto AV switching

If your VCR is connected to the euroconnector and the VCR is switched to playback, the TV is automatically switched to **AV1** mode. If you want to keep on watching in TV mode, press the cursor up/down, + P - or press the digit keys.

Child lock

 
If the child lock is on, the TV can only be switched on and operated with the remote control. The keys in front of the TV cannot be used. In this way you can prevent unauthorised use of your TV. If the message **Child lock On** appears, the child lock must be switched off before you can use the front panel keys to select a TV channel.

- 1 Select **Child lock** in the Special menu.
- 2 Press the cursor left/right to select **Child lock On**.
- 3 Press the **MENU** key repeatedly to exit the menu.

Auto off

If Auto off is switched **On**, the TV automatically switches to standby if for a period of about 12 minutes no aerial signal is received.

- 1 Select **Auto off** in the Special menu.
- 2 Press the cursor left/right to select Auto off **On**.
- 3 Press the **MENU** key repeatedly to exit the menu.

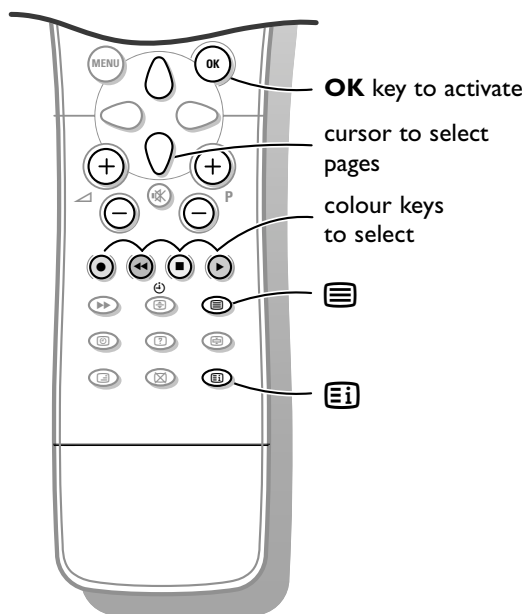


Most TV channels broadcast information via teletext.

Each channel which broadcasts teletext transmits a page with information on how to use its teletext system. Look for the teletext page with the main index (usually page 100). Depending on the TV channel, teletext is transmitted in different systems: **Standard teletext**, **TOP** and **FASTEXT**.

- **Standard teletext** consists of a number of pages which are selected by directly entering the corresponding page number.
- **TOP** and **FASTEXT** make use of the colours along the bottom line, corresponding with the colour keys of your remote control, to select teletext information

Switch Teletext on and off

Press  to switch the teletext on or off. The main index page or the last selected page appears on the screen together with an information headline and an option line at the bottom of the screen.

Select a Teletext page

With the digit keys

Enter the desired page number with the digit keys.

The page counter seeks the page.

A message appears when you have entered a non-existent or incorrect page number. Complete the 3- digit number and then re-enter the correct page number. Page numbers beginning with 0 or 9 do not exist.


With the bottom option line

Select with the colour keys, corresponding to the coloured options at the bottom of the screen, the desired subject.


With the cursor up/down

 
Press the cursor up/down to select the previous or the following page.

Select the index teletext page

Press the  key to display the main index (usually p.100).

Only for TOP teletext broadcasts:

Not all TV channels broadcast TOP teletext. TOP orders the pages in categories and adds other possibilities of enhancing ease of use. Press the  key. A TOP overview of the teletext subjects available is displayed. Make use of the colour keys to select teletext information or directly select the teletext pages with the digit keys.

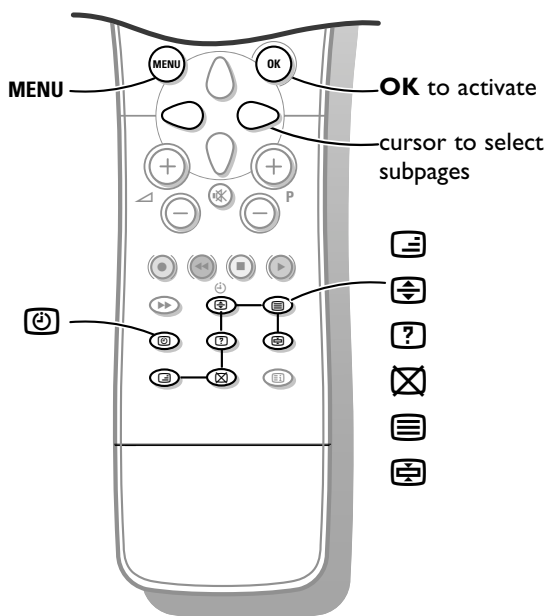

Select subpages

If subpages are available you can stop them from automatically rotating or select the described subpage yourself.

Press the key.

The subpage number is displayed at the bottom of the screen.

Press the red or green key to select the previous or following subpage, or change the subpage with the cursor up/down or with the digit keys.

Press the key again to exit this function.

Special teletext functions

Enlarge

Press repeatedly to display the upper part, the lower part and then to return to the normal page size. When the upper part is displayed, you can scroll the text, line by line using the cursor up/down.

Reveal

Press to reveal/conceal the hidden information, such as solutions to riddles and puzzles.

Hold

Press to stop the automatically rotating of the subpages if these are available.

The icon is displayed at the top of the screen.

Press the key again to continue the automatic rotating again

Mix

Press the key to display the teletext pages superimposed on the TV picture.

Press the key again to switch the TV picture off again.

Interrupt

Press .

The TV programme appears.

at the top of the screen indicates that you are still in the teletext mode.

Before interrupting teletext, you may select a page number.

 
When the page has been found, the information line appears briefly on your screen.

Press again.

Teletext reappears.

Connect Peripheral Equipment

There is a wide range of video and audio equipment that can be connected to your TV. The following connection diagrams show you how to connect them.

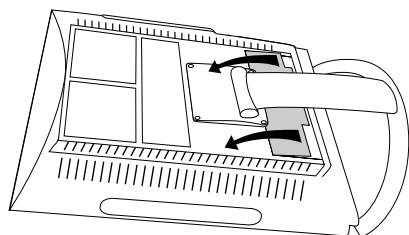


Preparation

Remove the backplate at the back of the TV as shown on the illustration opposite.

Lay the LCD TV with the screen down on a table as it will be easier to connect your peripheral equipment. Please take your precautions not to damage the screen.

Video recorder

 
With a eurocable

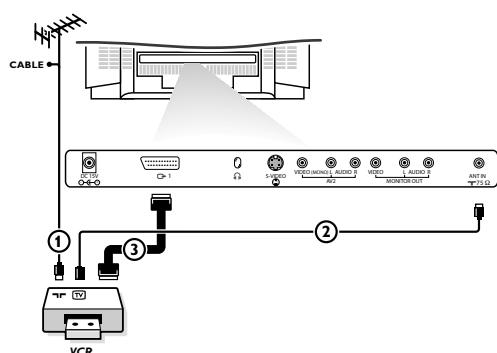


With a eurocable you will obtain a better picture quality than with an aerial cable only.

- 1 Connect the aerial cables ①, ② and the eurocable ③ as shown opposite.
- 2 Press the ► key on the VCR. The TV will switch to **AV1** mode automatically.
If you want to keep on watching in TV mode, press the cursor up/down, + P - or press the digit keys

 

With an aerial cable only

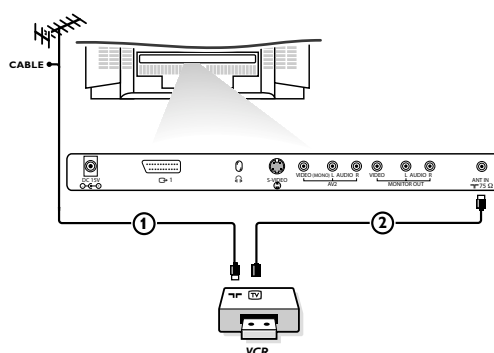

- 1 Connect the aerial cables ① and ② as shown opposite.
- 2 **Search for and store the test signal of the VCR.**
 - Unplug the aerial cable ① from the aerial socket of your VCR.
 - Switch on your TV and put the VCR on the test signal. (See the handbook for your VCR)
 - Search for the test signal of your VCR in the same way as you searched for and stored TV channels. See Manual programme tuning, p. 6.
 - Store the test signal under a programme number.
 - Replace the aerial cable in the aerial socket of your VCR after you have stored the test signal.
- 3 Select the programme number under which the VCR is stored.
- 4 Press the ► key on the VCR.

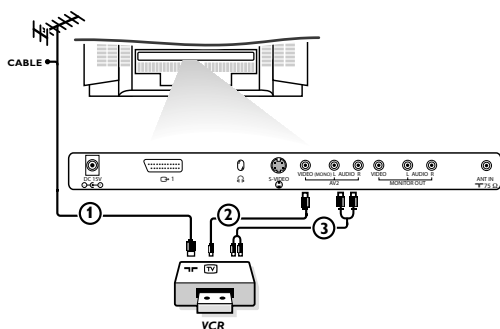 


With Audio/Video cables

 

- 1 Connect the aerial cable ① and the Audio/Video cables ② and ③ as shown opposite.
- 2 Press the  key on the remote control or select **Source** in the Special menu (See p. 12) to select **AV2**.
- 3 Press the  key on the VCR.

*Note: If you have a mono VCR, connect the audio cable from the VCR to the **AUDIO (MONO) L** connector only at the back of the TV.*

 
S-VHS video recorder

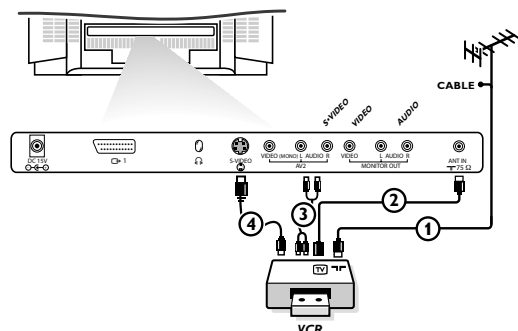

 With an S-VHS VCR you will obtain a better picture quality.

- 1 Connect the aerial cables ① and ② as shown opposite.
- 2 Connect the S-Video cable ③ to the **S-VIDEO** socket of the TV.
- 3 Connect the audio cable ④ as shown opposite.
- Note: Never connect to the same TV one VCR with S-VHS cables at the same time as one VCR with a euroconnector.*
- 4 Press the  key on the remote control or select **Source** in the Special menu (See p. 12) to select S-Video.
- 5 Press the  key on the VCR.

 MONITOR OUT connections

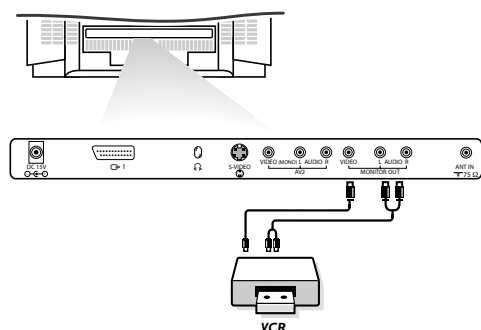


The **MONITOR OUT** connections can be used for daisy chaining or to record programmes from your TV.

Only when a VCR is connected to **MONITOR OUT** it is possible to record a programme from other equipment connected to the TV.

When a video recorder is not connected to **MONITOR OUT** you can only record a programme from the aerial or from the cable system.

 
Camera & camcorder

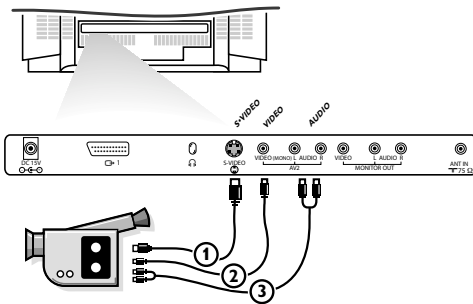



- 1 Connect your camera or camcorder to the **VIDEO** socket ② and **AUDIO (MONO) L** ③ for mono equipment.
- 2 For stereo equipment also connect **AUDIO R** ③.

 
S-VHS quality with an S-VHS camcorder is obtained by connecting the S-VHS cables with the **S-VIDEO** input ① and **AUDIO** input ③.

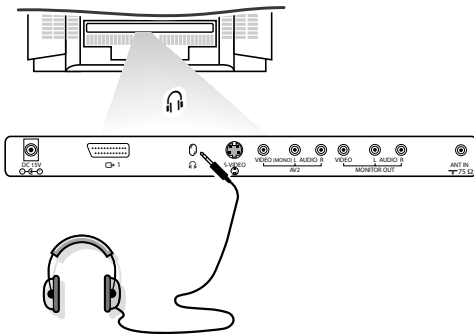Headphone



- 1 Insert the plug into the headphone socket  at the back of the TV.
- 2 Press the  key on the remote control to switch off the sound from the headphone and the internal loudspeakers of the TV.
- 3 Press the cursor left/right to adjust the volume.

 Video recorder keys

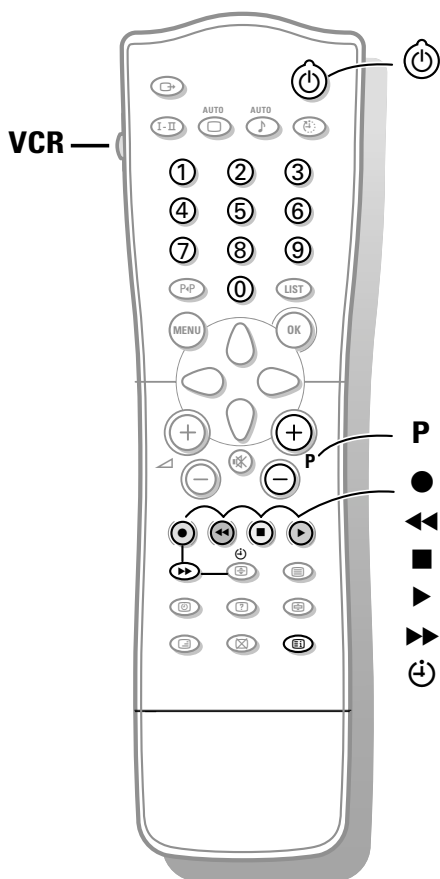

Most of the video equipment from our range of products can be operated with the remote control of your TV.

Keep the **VCR** key on the left side of the remote control pressed and simultaneously press:

- for record
- ◀◀ for rewind
- for stop
- ▶ for play
- ▶▶ for fast forward
- ⌚ for VCR timer
- P + for sequential programme selection from the VCR tuner
- 0 to 9 to select a programme number from your VCR tuner
- ⏻ to switch the VCR to standby

Care of the screen



Do not rub or strike the screen with anything hard as this may scratch, mar, or damage the screen permanently.

Unplug the screen before cleaning the screen. Dust the TV by wiping the screen and the cabinet with a soft, clean cloth. If the screen requires additional cleaning, use a clean, damp cloth. Do not use liquid cleaners or aerosol cleaners.

Mobile telephone warning

To avoid disturbances in picture and sound, malfunctioning of your TV or even damage to the TV, keep away your mobile telephone from the TV.


Poor Picture

- Have you selected the correct TV system?
- Are the cables connected properly? (The aerial cable to the TV or VCR, the VGA cables to the TV, the power cable.)
- Is your TV or house aerial located too close to loudspeakers, non-earthed audio equipment or neon lights, etc.?
- Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial.
- Are brightness and contrast out of adjustment? Press the **AUTO**  or  key to restore the predefined factory settings. Try another channel, perhaps the received signal is too weak
- Sometimes poor picture quality is possible when having an S-VHS VCR, camera or camcorder connected and another peripheral is connected to **AV1** or **AV2** at the same time. In this case switch off one of the other peripherals.

No picture

- Is the TV switched on
- Is the aerial connected properly? Are the plugs tightly connected in the aerial socket?
- Is the aerial cable in good condition and does it have suitable plugs?

No sound

No sound on any channel? Check the volume isn't at minimum. Is the sound interrupted with the mute key ?

Remote control

- If your TV no longer responds to the remote control, the batteries may be dead. You can still use the keys in front of the TV.
- Has the child lock been switched off?

No solution

Switch your TV off and on again once. Never attempt to repair a defective TV yourself.

Never remove the back cover of the TV. If the TV does not operate properly, unplug it and call your dealer or a TV technician.

End of life directives

We are paying a lot of attention to produce environmentally-friendly in green focal areas. Your new TV contains materials which can be recycled and reused.

At the end of its life specialised companies can dismantle the discarded TV to concentrate the reusable materials and to minimise the amount of materials to be disposed of.

Please ensure you dispose of your old TV according to local regulations.

How to dispose of batteries?

The batteries supplied do not contain the heavy metals mercury and cadmium. Nevertheless in many countries batteries may not be disposed of with your household waste. Please ensure you dispose of batteries according to local regulations.

Index

- a** auto picture, 8
auto sound, 8
automatic installation, 5
AVL, 11
- b** balance, 11
bass, 11
bilingual broadcast, 8
brightness, 11
- c** camcorder, 17
C-channels, 6
child lock, 12
colour, 11
- e** equalizer, 11
eurocable, 15
- f** factory settings, 8
fine tune, 6
- h** headphone, 17
- l** language, 4
- m** manual installation, 6
menu language, 4
mono, 8
mute, 9
- n** name, 6
nicam, 8
- p** programme list, 7
- s** S-channels, 6
search, 5
search for tv channels, 5
sharpness, 11
sleep timer, 9
source, 12
sound adjustments, 11
stereo, 8
store TV channels, 4
S-VHS, 16
s-video, 16
switch TV on, 3
system, 5
- t** teletext, 13
tint, 11
treble, 11
- v** video recorder, 15
volume, 9

Contents	1
Installation	2
Operation	8
Connect Peripheral Equipment	15